


# Ready2Talk 2015-2019 Sprinter Van

## PA 63 - PA 64 to OEM Stereo Connection

## NON MBUX Stereos

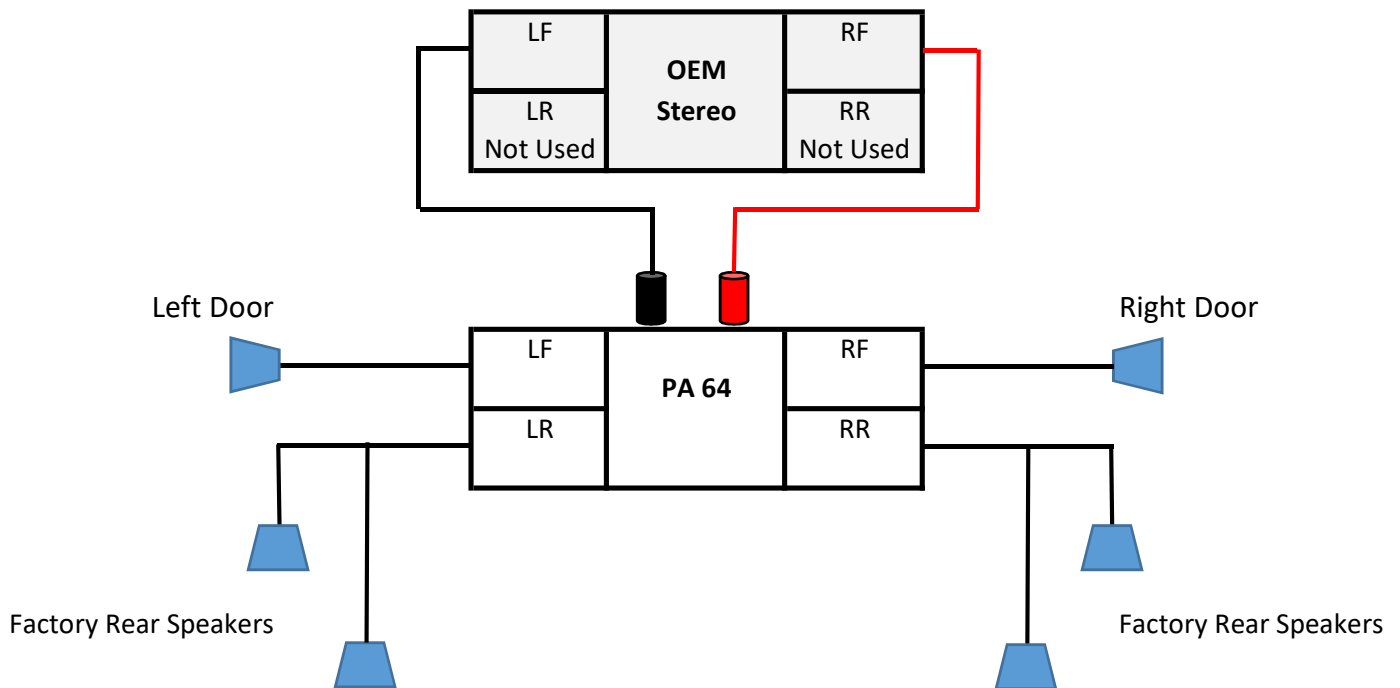

### Instructions

- Disconnect the main plug containing the speaker connections from the radio module
- Cut the speaker wires for all 4 channels and connect to PA 64 Plugs / **See Below For Color Codes**
- Cap off the rear output wires from the radio / they are not used
- Set Input Switch on PA 64 to "**HIGH**"
- Connect PA 64 Yellow power wire to a constant 12V source / Direct to Battery
- Connect PA 64 Red power wire to Fuse Slot 29 under Drivers Seat, use a 2 Amp Fuse

	OEM Stereo	PA 64 RCA Pig Tails		Van Speaker Wires	PA 64 Output
LF +	Brown/Purple	White	LF +	Brown/Purple	White
LF -	Brown/Green	White/Black	LF -	Brown/Green	White/Black
RF +	Brown/Orange	Gray	RF +	Brown/Orange	Gray
RF -	Brown/Blue	Gray/Black	RF -	Brown/Blue	Gray/Black
LR +	Brown/White	Cap Off	LR +	Brown/White	Green
LR -	Brown/Red	Cap Off	LR -	Brown/Red	Green/Black
RR +	Brown/ Pink	Cap Off	RR +	Brown/ Pink	Purple
RR -	Brown/Gray	Cap Off	RR -	Brown/Gray	Purple/Black

### How Things Will Work:

- With this configuration ALL the sound is through the PA 64 and will play everything to all speakers
- The power switch MUST be ON for any sound to play from the stereo
- If this causes confusion, install the included power switch jumper on the PCB then the PA 64 will only turn on/off with the vehicles key
- The front speaker volume can be reduced vs rear speakers by the adjustment pots on the PCB
- Since the PA 64 is connected to the front channels, the fader control on the stereo must be set to set to the front or center position