TAK (Transit AUX Kit)
for PA 5 Portable

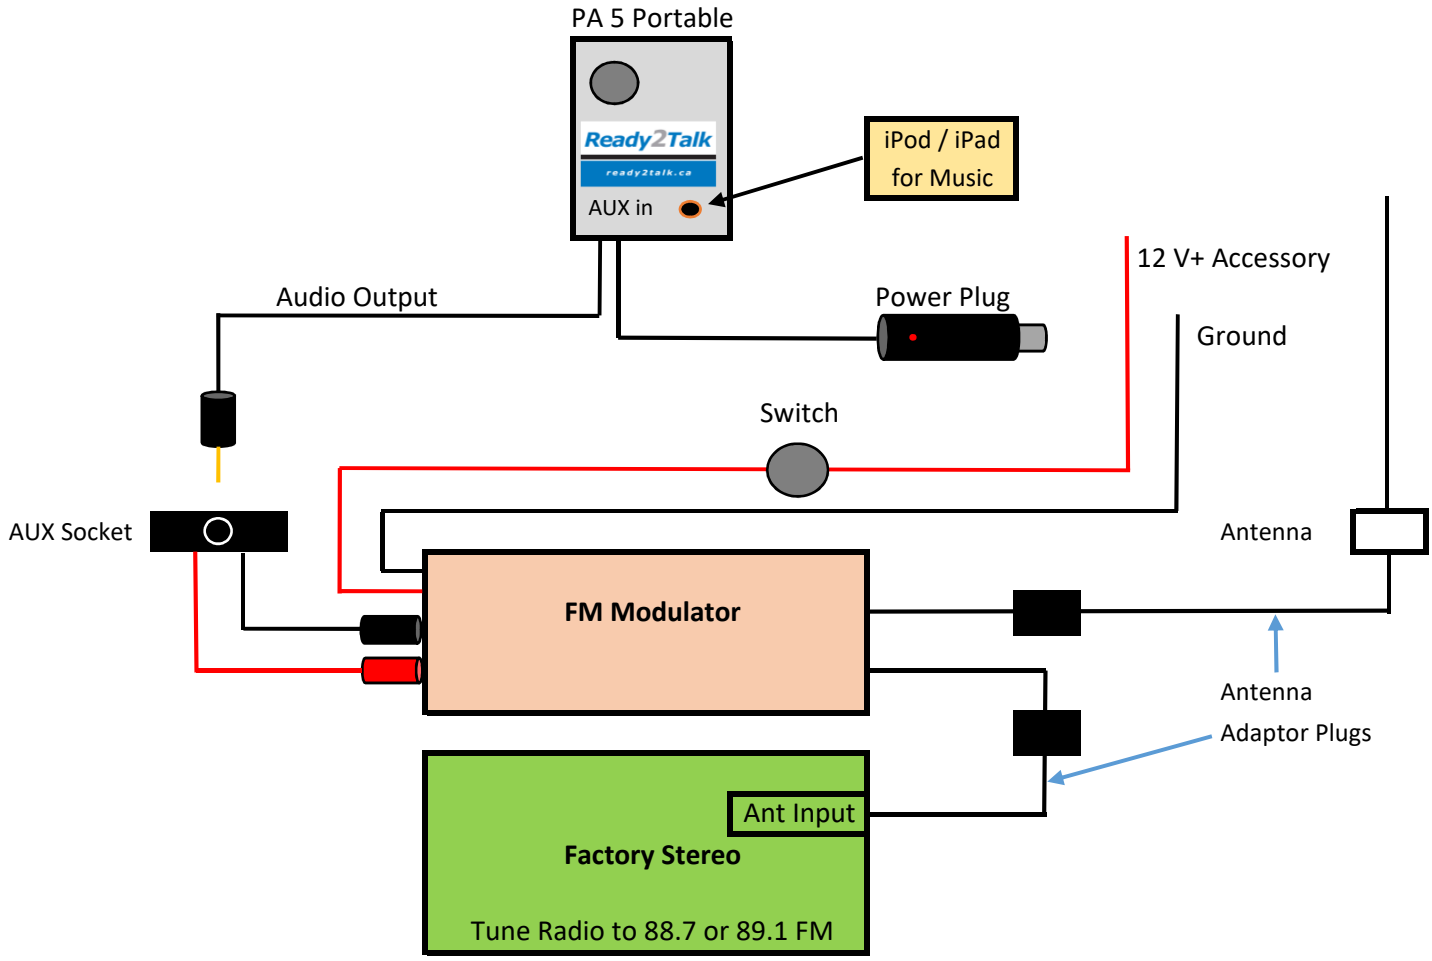

The TAK connects the PA to the antenna circuit of your factory stereo through the FM radio using a FM Modulator.
Once connected, to use the PA just turn the on/off switch and it will in turn activate the FM Modulator.
Next put your stereo into the FM radio mode and tune into 88.37 or 89.1 MHz and you will hear the PA.

Connections

1 Remove the stereo from the dashboard. There is no need to unplug the stereo.

2 Mount the AUX input socket in your desired location and using the RCA adaptors , connect to the FM Modulator.

3 Mount the on/off switch in desired location and connect the red wire to 12V Accessory and the black wire to ground.

4 Unplug the antenna from the Ford stereo and c(using antenna adaptors) connect it to the corresponding antenna plug on the FM Modulator, then connect the remaining antenna plug from the FM Modulator to the stereo.

5 Turn on the vans stereo, turn and put into FM radio mode. Tune to 88.7or 89.1 MHZ and you should hear off station noise. Turn on the on/off switch for the FM Modulator, the noise will stop, talk into the mic and the PA sound will play clearly. **NOTE: I**f 88.7 MHZ is used by a radio station in your area, there is a switch on the side of the FM modulator that allows you to use 89.1 MHZ

6 Should you want to connect / play an iPod to play music, you can connect it into the AUX input socket on the front of your PA. Just make sure the microphone is turned off. When the mic is turned on the music will automatically mute. If you want to play music AND talk, there is an internal adjustment that will allow that, just look at the FAQ page on Ready2TalkPA.com and click on "PA 5 Series Mute Adjustment Instructions" PDF.

7 Should you have ANY questions… please give us a call at 1 866 724-5351